
Segmented dimming

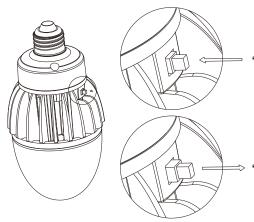

"Rated Power" when the button is pressed

"Half of rated power" when the button pops up

Rated Wattage	Dimming mode		
25W	25W 12.5W		
35W	35W 17.5W		
41W	41W 20.5W		

WARNING:

THIS DEVICE IS NOT INTENDED FOR USE WITH EMERGENCY EXITS ADDED WEIGHT OF THE DEVICE MAY CAUSE INSTABILITY OF A FREE-STANDING PORTABLE LUMINAIRE USE ONLY WITH A PORTABLE TABLE LUMINAIRE THAT IS PROVIDED WITH A SHADE

AVERTISSEMENT:

NE CONVIENT PAS AUX SORTIES DE SECOURS LE DISPOSITIF CONSTITUE UN POIDS SUPPLÉMENTAIRE CE QUI PEUT CAUSER

L'INSTABILITÉ D'UN LUMINAIRE PORTATIF AUTONOME UTILISER UNIQUEMENT AVEC UNE LAMPE DE TABLE DOTÉE D'UN ABAT-JOUR

LED Corn Light Instruction



Can not use the electric generator to test the LED light. Please avoid using the led fixture in environment where there is smoke, sulfur, and corrosive substances. But if used in such environment, make sure the led fixture is well protected by an enclosed lampshade whose dimension is no less than below size, and whose material is either glass or semi-glass, semi-metallic. Surface of the lampshade shall not have any covering which prevents heat dissipation.

Power(W)	15	20-25	35-41
Volume(CM)	31*19*19	34*20*20	41*21*21

LED bulb lamp Instruction

Product features:

- ◆ 360 degree lighting.
- ◆ Can be with Clear or frosted PC or glass cover.
- No fan.
- ◆ 15-41W lamp can be with AC120-277V internal driver..
- ◆ 15-41W Sealant pouring for whole driver and lamp plastic housing.
- Long lifespan and good heat dissipation.
- Direct replacement for Metal Halide, easy Installation.
- Fits many different fixtures to replace traditional lamps.

Application:

Widely used in supermarket, warehouse, garage, home, office, hotel, hospital, school, street, garden etc.











Installation Instructions:


Warning: Please make sure the power is off before installation.

- 1. Turn off the power switch.
- 2. Screw off the CFL or MHL or HPS and so on, see Figure (3)(4).
- 3. Take out LED bulb lamp and screw on, see Figure (1)(2).
- 4. Figure (1) (2):AC internal driver, (Note: Pls make sure to take off the ballast before installing LED bulb lamp, otherwise the ballast will produce the resonance of high voltage and makes LED bulb lamp breakdown.)
- 5. Turn on the power switch. (Finished!)

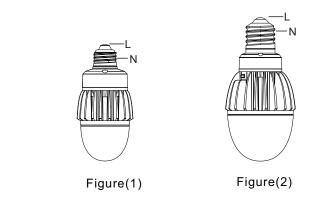

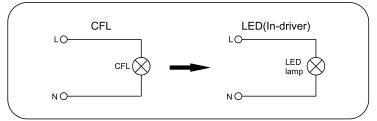

Figure(3)

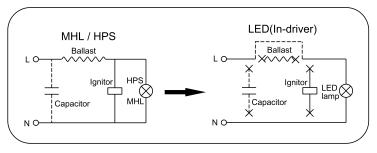

Figure(4)