




INSTALLATION INSTRUCTION

CLT94 Dual Mode Internal Driver For Compatible Tube


Installation Guide:

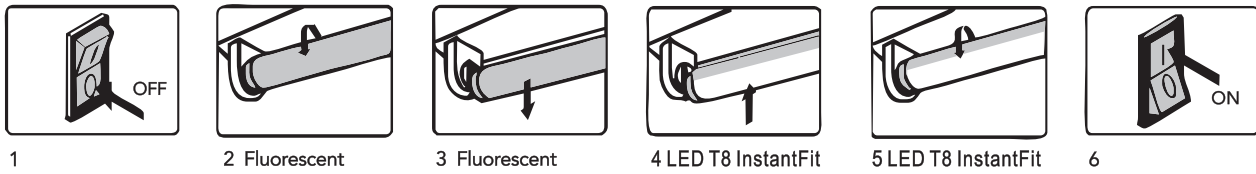

“Plug and Play” Procedure



1. Turn off the power.
2. Remove diffuser (if provided).
3. Remove and dispose the fluorescent tubes properly as they contain mercury.
4. Select the appropriate CCT , then put led tube in the lighting fixture.
5. Install the LED tubes, close the diffuser (if provided).
6. Turn on the power.

⚠ **Ballast Compatibility List must be checked prior to installation.**
See www.comm-led.com for ballast compatibility on model.

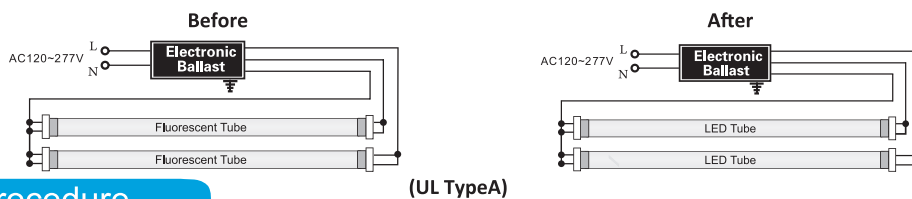


Retrofit Procedure

1. Turn off the power.
2. Remove diffuser (if provided).
3. Remove and dispose the fluorescent tubes properly as they contain mercury.
4. Cut the wires as shown in the diagram.
5. Make the new wire connect to branch circuit as shown.
6. Select the appropriate CCT and Watt, then put led tube in the lighting fixture.
7. Replace the cover over the wiring channel.
8. Install the LED tubes, close the diffuser.
9. Turn on the power.

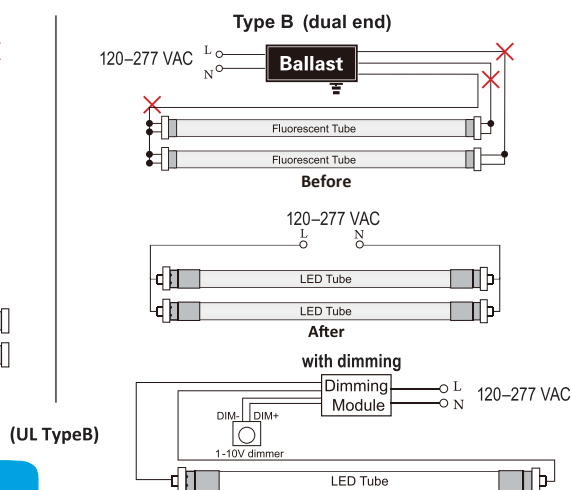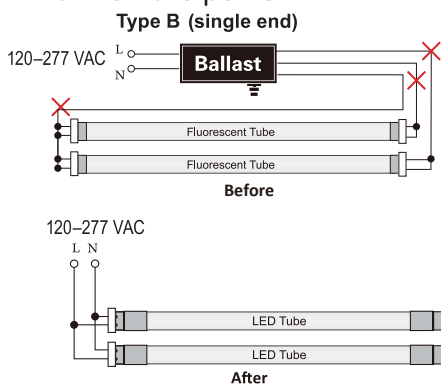

Shunted vs. non-shunted sockets
Path of electrical current in red

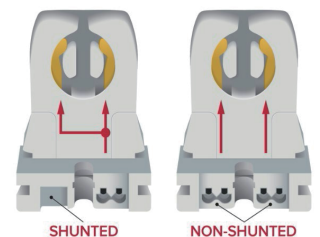

Shunted socket is required
in double end mode

⚠ WARNING

1. These LED Tubes should be installed by a licensed electrician.
2. These LED Tubes should be used indoors(damp or dry locations only).Not suitable for wet location.
3. Make sure tombstones/lamp holders are still in good condition and not defected before installation.
4. Ensure the brand and model no. of the ballast of replacement tube are in our compatible ballast list.
5. Make sure the ballast is working and still under warranty before installation.
6. Put LED tubes/G13 pins into right position of the socket, install properly.
7. This device is not suitable for using with emergency exits.
8. **Not rated for enclosed fixture. The lifespan of this LED tube will be significantly shorter in an enclosed fixture (e.g., tri-proof, vapor-tight) compared to its lifespan in an opened fixture.**
9. Do not use with magnetic ballasts.
10. Do not use with dimmers. Dimmable when used with compatible dimming ballast (UL Type A) or compatible dimming module (UL Type B).

Commercial LED is not responsible for products damaged by improper installation or operation.

CLT94 BALLAST LIST FOR T8 LED TUBE

1. Our tubes can be compatible with the ballasts listed below, if you intend to install ballast compatible tube with ballasts not be listed below, risk of damage or losses may occur. We disclaim liability for any damage or losses by not following the instructions in this document.

2. We are testing more and more ballasts and will update this list all the time. If you do not see your ballast on this list, please contact us.

 **Ballast Compatibility List must be checked prior to installation. See www.comm-led.com for ballast compatibility on model.**

Non-Dimming Ballast Compatibility List

ADVANCE	
1	IOPA-4P32-LW-N
GE	
1	GE232MAX-L/Ultra
2	GE332MAX-N/Ultra
3	GE232MAX347-N
4	GE432MAX347-N
5	GE232-MVPS-N
6	GE332-MVPS-N
7	GE432-MVPS-N
8	GE432-120RESDIYB
9	GE-240-RS-MV-N
10	GE232-N-347
OSRAM	
1	QHE 2x32T8/UNV ISN-SC
2	QHE 3x32T8/UNV ISN-SC
3	QHE 3x32T8/UNV PSN-SC
TRIAD	
1	B232IUNVHP-N
2	B332IUNVHP-A
3	B432IUNVHP-A
4	B232IUNVHP-B

PHILIPS	
1	ICN-2P32-N
2	ICN-3P32-N
3	IOP-4P32-LW-N
4	IOPA-1P32-N
5	IOPA-4P32-N
6	IOPA-2P32-LW-N
7	IOP-3P32-N
SYLVANIA	
1	QHE 1x32T8/UNV ISN-SC
2	QHE 3x32T8/UNV ISL-SC
3	QTP 2x32T8/UNV ISL-SC
4	QTP 2x32T8/UNV ISN-SC
5	QT 4X32/120 LP
6	QT 2x32 T8/347 ISL-SC
7	QHE 4x32T8/347 ISN-SC
8	QHE 4x32T8/347 ISL-SC
UNIVERSAL	
1	B332IUNVHE-A
2	B432IUNVHE-A
3	B232IUNVEL-N
4	B332IUNVEL-A
5	B232IUNVHEH-A
6	B332PUNVHE-A
7	B4321UNVEL-A

Dimming Ballast Compatibility List

GE	
1	GE232MAX90-S6
2	GE232MAX90-S60 NNB
3	GE332MAX90-V60